

KUADRA A




Corner entry enclosure, 2 sliding + 2 fixed sections

IMPORTANT Make your own enclosure by selecting 2 individual sides (1 right side + 1 left side)

Measurements (cm)	Access	Code	Left	Right	Glass 8mm	Profile Type	Price per side
Shower enclosure adjustability	Front fixed panel		S-	D-	1	B	K
A	F	*					
68 ↔ 71	31	32	KUADA69L				
71 ↔ 74	33	34	KUADA72L				
74 ↔ 77	34	36	KUADA75L				
77 ↔ 80	36	38	KUADA78L				
80 ↔ 83	37	40	KUADA81L				
83 ↔ 86	39	42	KUADA84L				
86 ↔ 89	40	44	KUADA87L				
89 ↔ 92	42	46	KUADA90L				
92 ↔ 95	43	48	KUADA93L				
95 ↔ 98	45	50	KUADA96L				
98 ↔ 101	46	52	KUADA99L				
101 ↔ 104	48	54	KUADA102L				
104 ↔ 107	49	56	KUADA105L				
107 ↔ 110	51	58	KUADA108L				
110 ↔ 113	52	60	KUADA111L				
113 ↔ 116	54	62	KUADA114L				
116 ↔ 119	55	64	KUADA117L				
119 ↔ 122	57	66	KUADA120L				
H 170 ↴ 200		D KUADALDSP					
L 69 ↔ 120	-	S KUADALSSP	-	-			

How to choose your product using the codes:

KUADA69LS-1K = **KUADA69L** + **S-** + **1** + **K**

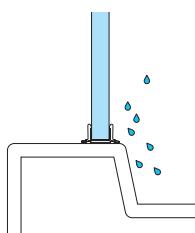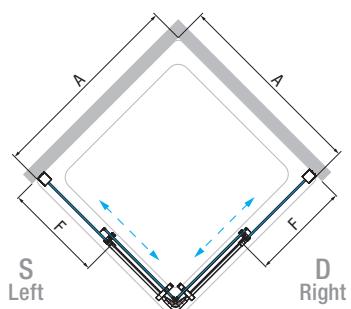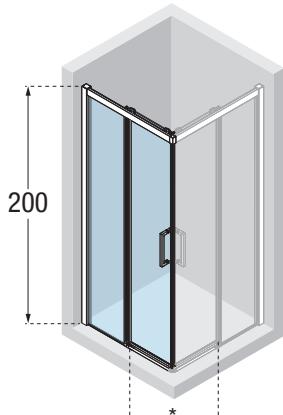

Installation recommended
on inside edge of tray



How to take the measurement see **page 90**

● IN STOCK UK

(Other products) please check availability





CRYSTAL
CLEAR
TREATMENT

NewChrome

TECHNICAL DATA

GLASS TYPES (European Standards UNI EN 14428)



Clear

HANDLES



Chrome metallic handle

PROFILE COLOURS / COLORES PERFILES



Silver






Chrome

HINGES




UV bonded hinges

HOW TO TAKE THE MEASUREMENT

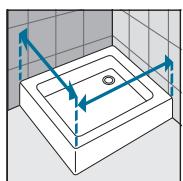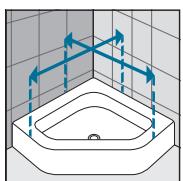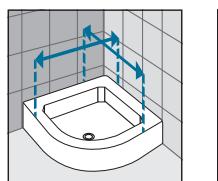

Take the measurements from wall to the external edge of the shower tray. Measurements must be taken once the walls are finished and tiled, according to the above drawings.

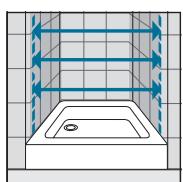

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Measurements must be taken once the walls are finished and tiled, according to the above drawings.