


How To Wet Apply Vinyl



Step 1.

Use a clean cloth with a 2:1 water and alcohol mixture or Windex. Wipe the surface thoroughly and dry with a lint-free cloth.

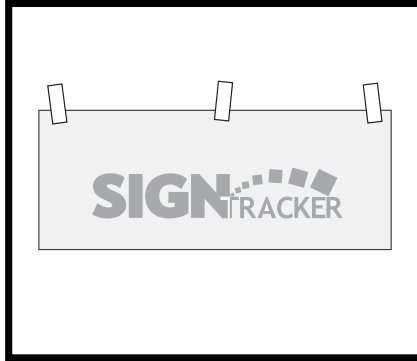


Step 2.

Align the imprint in the desired position and carefully secure it in place.



Step 3.

Create a hinge by applying a strip of tape along the entire top edge of the imprint, ensuring it's securely fastened.

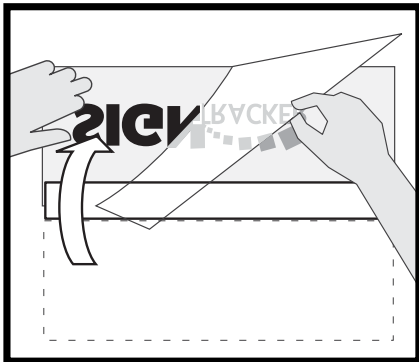


Step 4.

Flip the imprint over and carefully peel away the liner from the back, ensuring the adhesive surface remains clean and intact.




Step 5.

Lightly spray the surface with a solution of 1 part dishwash detergent to 99 parts water. This allows for positioning adjustments before the imprint adheres permanently.

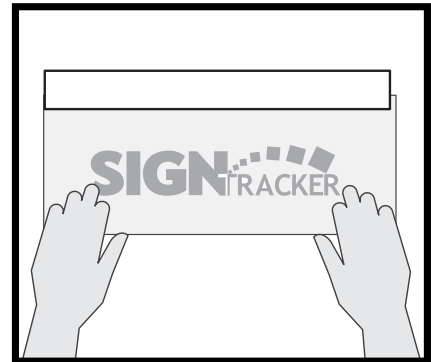


Step 6.

Gently and precisely place the imprint back into it's original position.

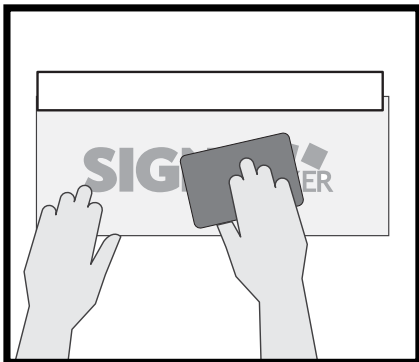

Step 7.

Press with a squeegee from the top center out to secure the imprint, then wait 15-30 minutes before removing the paper backing.

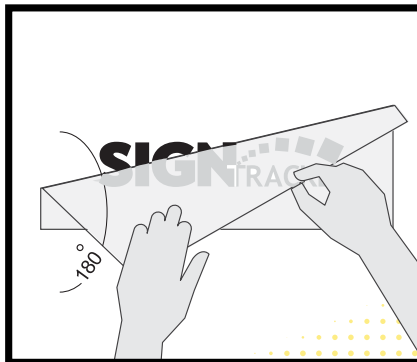

Step 8.

Peel off the mask at a 180-degree angle, pulling it back on itself. Then, squeegee the entire imprint again.